

# Initial Pairing Instructions for Bluetooth® Keyboard to Tablets

The CR2600 Bluetooth bar code reader is compatible with most tablets.

1. In your device’s list of applications, select the ‘Settings’ icon.
2. Select the ‘Bluetooth’ setting.
3. Scan the following code to enable your CR2600 to be discoverable by the tablet.












**Bluetooth Keyboard Discoverable Mode**



M10257\_01

4. Once reader is in discoverable mode, it will beep 2 times. You will have 30 seconds to initiate connection to host device. If 30 seconds elapses without connecting to host device, scan discoverable mode code again.
5. Your CR2600 bar code reader will appear on the list of Bluetooth devices in the tablet, select the reader to initiate connection.
6. A window with a PIN will appear on the tablet.
7. Once reader beeps 2 times, the reader is ready for the user to enter the PIN. Using the PIN Reference Codes, scan each of the PIN digits with your CR2600. You will have 30 seconds to enter PIN. Scan ‘Submit PIN’ code when pin sequence has been entered.
8. Tablet will show positive connection indicator when connection is completed. The CR2600 will beep once when connected and wireless icon LED will remain solid.

**PIN Reference Codes**

0	1	2	3
 M10271_01	 M10262_01	 M10263_01	 M10264_01
4	5	6	7
 M10265_01	 M10266_01	 M10267_01	 M10268_01
8	9	Submit PIN	
 M10269_01	 M10270_01	 M10272_01	

## Keyboard Display Options for Apple iOS\*

---

To configure the bottom button on the CR2600 to be able to toggle the host device's on-screen keyboard, scan the following:



### Keyboard Display Option On



M10259\_01

\*The Keyboard Display option is not compatible with other operating systems, it is only compatible with Apple iOS.

To reset the bottom button back to the default setting, scan the following:

### Keyboard Display Option Off



M10260\_01

## Re-connect to Other Bluetooth Devices

---

1. To re-establish connection to another host device already paired with the CR2600, scan the following code:

### Switch Host Device



M10258\_01

2. The CR2600 will appear in the list of devices in the Bluetooth menu. Select the reader to initiate connection.

**Note:** If the CR2600 battery has been removed, reader is out of range, or is powered off while in default connection settings, the CR2600 will initiate connection to the most recent host device when back in service.

## Clear Connection History

---

To clear connection information from all Bluetooth Keyboard hosts, scan the following:

### Clear Bluetooth Connection



M10261\_01

**Note:** To re-establish connection once connection history has been cleared, repeat steps 1-8 of Initial Pairing Instructions.

